




964031
S 3.5x10x0.2

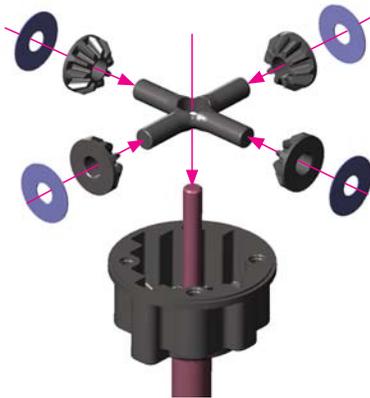


- It is important that the diff cross enters the differential case freely.
- If not, use the hobby knife to remove the remaining material.



Silicone oil

Fill just above the cross-pins.

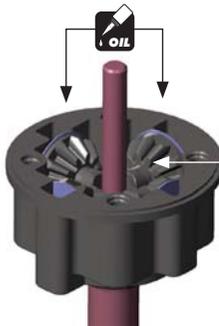

Fill differential up to the top of the diff cross-pins. DO NOT fill the diff to the top of the housing.



TIP


HUDY Premium Silicone Oil

LOW TRACTION	
500 cSt	#106350
550 cSt	#106355
600 cSt	#106360
650 cSt	#106365
700 cSt	#106370
750 cSt	#106375
800 cSt	#106380
900 cSt	#106390
1000 cSt	#106410

MEDIUM-HIGH TRACTION	
2000 cSt	#106420
3000 cSt	#106430
4000 cSt	#106440
5000 cSt	#106450

SUPER-HIGH TRACTION	
6000 cSt	#106460
7000 cSt	#106470
8000 cSt	#106480
10000 cSt	#106510



NOTE: Softer oil increases steering and traction, harder oil increases stability and cornering speed of the car.

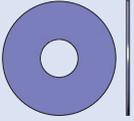

964050
5.5x15x0.3



972050
0.5x2

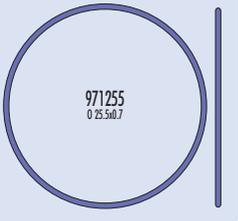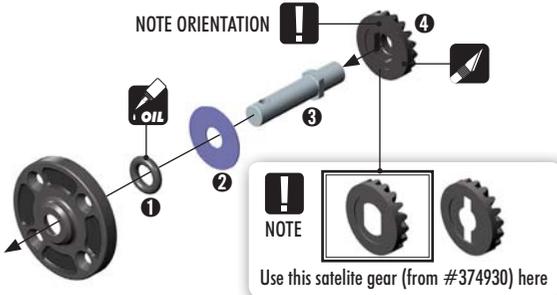


After disassembling the gear diff the large O-ring may have an increased size and may be more difficult to re-install. We recommend either inserting the old O-ring carefully in the diff cover, or replacing the old O-ring with a new O-ring if the old one cannot be made to fit properly.




903258
SFH M2.5x8



Tighten the screws equally but do NOT tighten them completely.

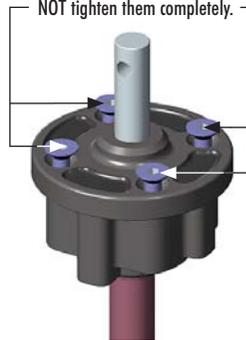


Finish tightening in this order.

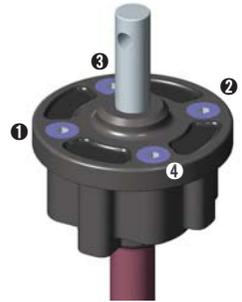




908258
SCH M2.5x8

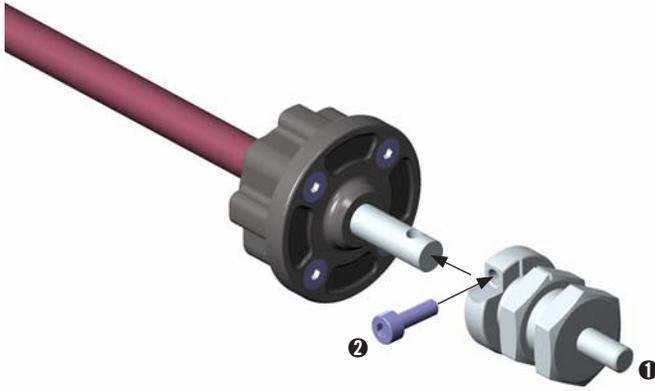

902256
SH M2.5x6

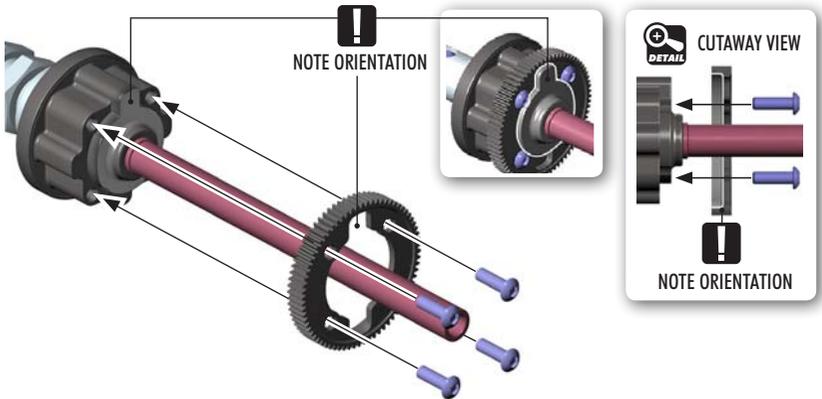

908258
SCH M2.5x8

