



Ball Differential Instructions

Differentials must be properly broken in to operate properly. When breaking in the diff, the balls create a groove in the diff rings; this is normal and essential for proper operation. If you tighten the diff fully the first time you build it, the balls will not create a proper groove and will become damaged. After the car is completely assembled, run the car for few minutes, then tighten each diff a little bit. Repeat this several times to break in the diff and set the correct tightness.

For complete information on adjusting the diff, please see the Set-Up Book.

If you have any questions, please do not hesitate to contact XRAY at **info@teamxray.com** or visit our website at **www.teamxray.com** for news and updates.