

XRAY NT1 DRIVE FLANGE

MAINTENANCE INSTRUCTIONS:

The one-way bearing is factory-preassembled and pressed into the drive flange. The bearing must be regularly serviced and cleaned by cleaning all debris from the bearing and lubricating it. For lubricating we suggest using XRAY's One-way Lube #309580. Regular servicing and cleaning will help to ensure a long lifetime of the bearing. Note that after some time the bearing will wear out, but please note that the bearing is **NOT** replaceable, meaning that you cannot replace it yourself. Therefore, when the bearing has worn out you will need to replace the drive flange.

