

XRAY M18RTR



CHANGING THE TRIGGER ANGLE TO ACHIEVE FULL SPEED

If your XRAY M18RTR does not go full speed you need to adjust the angle of the trigger on the radio. Follow this easy procedure.



1. Using a small Philips screwdriver, remove the indicated screw from the back of the transmitter as shown. By default, the screw is in position #1 (away from the trigger).



2. On the front of the transmitter, slide the switch to the LEFT (toward the trigger) as shown.



3. Moving the switch (step 2) will move the trigger to position #2 where the screw must be reinstalled.



4. Using a Philips screwdriver, install the screw into position #2 (toward the trigger) as shown. Do not overtighten the screw or you will strip the plastic.