




## XRAY XB808 DIFF BEARING TECH TIP

The ball bearings in the pinion gear assembly carry extreme load. In some rare cases the rubber seal of the 13x19 bearing which is installed in the bulkhead may become dislodged. To prevent this we suggest removing one seal on the inner bearing as illustrated.

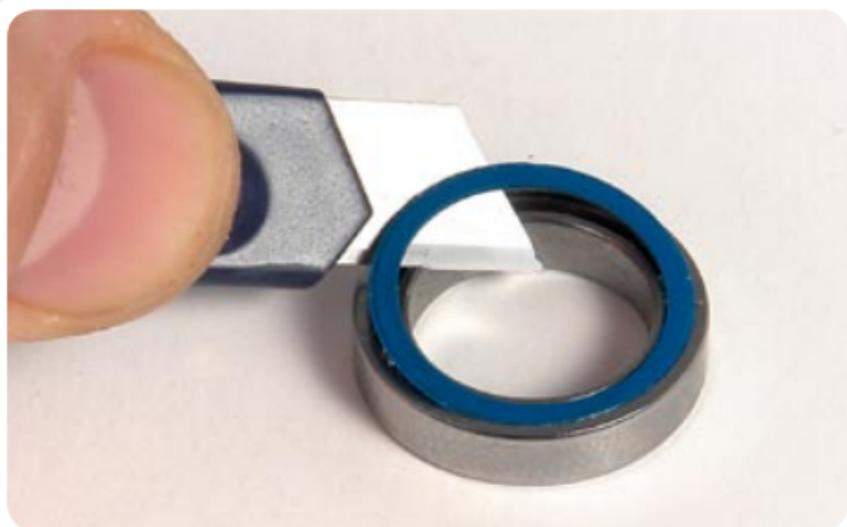

- 1 Use a hobby knife and remove one seal on the bearing.



- 2 Install the bearing with the removed seal facing inside the housing (see image).

**!** Please ensure proper servicing and regularly lube the bearing with grease. We suggest to use the HUDY Bearing Grease.



HUDY #106220



HUDY #106222



HUDY #106221