 
 


#941320 HIGH-SPEED BALL-BEARING 13x19x4 RUBBER & STEEL SEALED (2)

The 13x19 ball-bearings in the pinion gear assembly carry extreme load, and in some extreme situations the rubber seal of the ball-bearing installed in the bulkhead housing may become dislodged. To prevent this, XRAY has developed a new ball-bearing which has a steel seal on one side and a rubber seal on the other side.

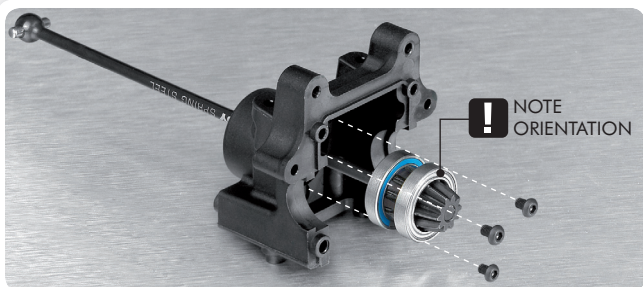

- 1 Install the ball-bearing with the steel seal facing inside the housing as shown.

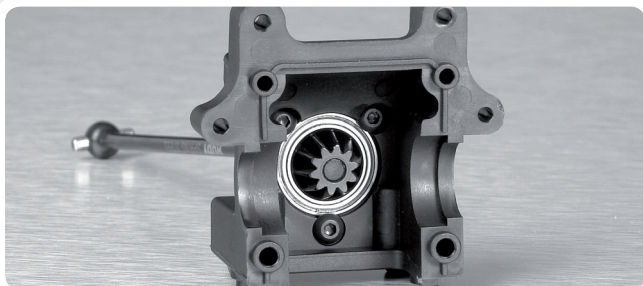

- 2 Assemble the ball-bearings in the housing as per the XB808 Instruction Manual (page 10/11, step 2).



Please perform proper servicing and regularly lube the bearing with grease. We suggest using HUDY Bearing Grease.



HUDY #106220



HUDY #106222



HUDY #106221