

1. Assemble the ball-bearings on the tensioner.

2. Attach the tensioner to the inside of the right rear bulkhead.

3. Press the tensioner bearings onto the front belt until the desired tension is reached. Tighten the long screw of the tensioner so it does not loosen.

