


When building your M18-MT follow the included instruction manual of XRAY M18T where majority of all procedures are identical. When building, always refer to this Supplementary Instruction Sheet for any additional steps.

Page 21. / section 5. STEERING SYSTEM

6B

NOTE:
Rear shocktower is larger than front shocktower

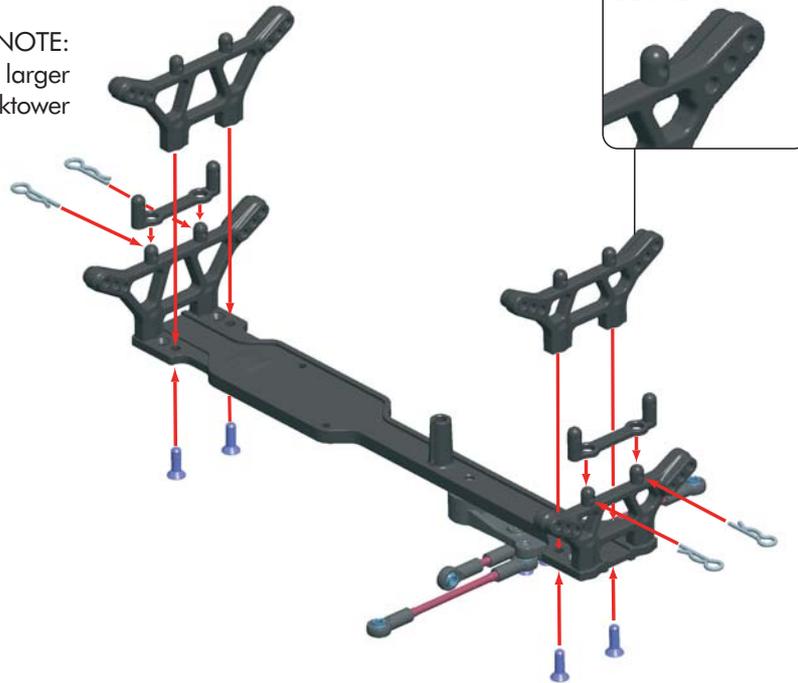

906258
2.5x8

Page 25. / SHOCK ABSORBERS

6.

section 6. - FRONT

To build front shock absorbers follow the same steps only build 4 of them.



4x

Page 25. / SHOCK ABSORBERS

6.


section 6. - REAR

To build rear shock absorbers follow the same steps only build 4 of them.




4x

Page 27.-28. / section 7. FINAL ASSEMBLY

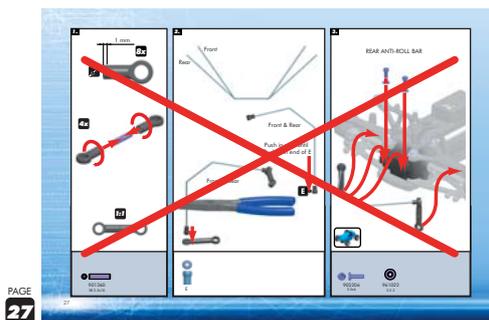

PAGE CANCELED

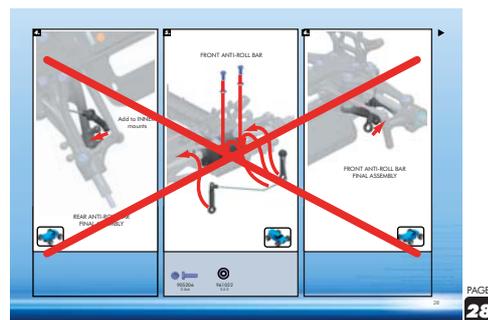

PAGE CANCELED

Front and rear anti-roll bars are not included or used in the M18-MT. Ignore pages 27 and 28 in the instruction manual.

Page 29. / FINAL ASSEMBLY **7.**

FRONT SHOCKS (SHORT)

INITIAL POSITIONS FOR ALL SHOCKS

905210
2.2x10

Page 29. / FINAL ASSEMBLY **8.**

REAR SHOCKS (LONG)

INITIAL POSITIONS FOR ALL SHOCKS

905210
2.2x10

Page 33. / section 7. FINAL ASSEMBLY - TIRE ASSEMBLY **16.**

-
-
-

CA 4x

DO NOT USE TOO MUCH GLUE

XRAY M18MT

!
Note the direction of the mounted tires.

XRAY M18MT SPARE PARTS

- #382089 Composite Body Post for Micro Monster Body (2)
- #389620 Micro Monster Truck Tire & Insert - Thrax (4+4) - OPTION
- #389621 Micro Monster Truck Tire & Insert - Chevron (4+4)
- #389760 Micro Body 1/18 MT - Hummer - OPTION
- #389761 Micro Body 1/18 MT - Cadillac
- #389940 XRAY M18MT Starburst Wheels (4)

For other spare parts please refer to the XRAY M18T spare part list.