




#305186 DELRIN® SOLID AXLE BODY - LIGHTWEIGHT

ASSEMBLY INSTRUCTIONS

Remaining parts must be used from the Multi-Diff™

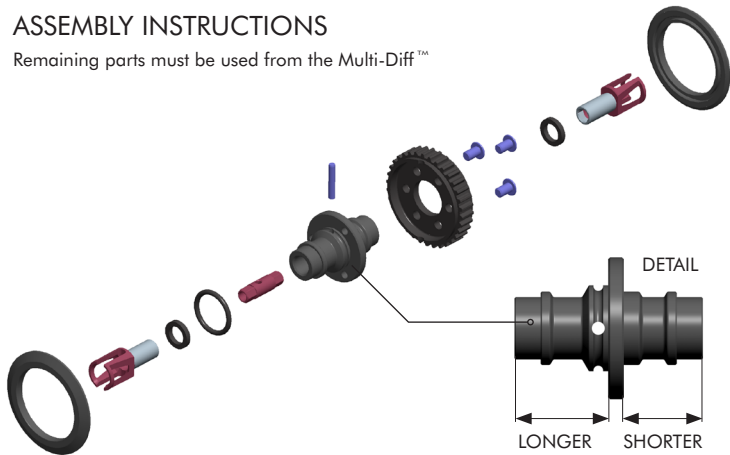

NOTICE: After installing the diff outdrives there may be a bit more play; this is correct and is not a fault.

If you have any questions, please do not hesitate to contact XRAY at info@teamxray.com or visit our website at www.teamxray.com for news and updates.