

XRAY NT1

INSTRUCTION MANUAL SUPPLEMENTARY SHEET


Use this NT1 Supplementary Instruction Sheet along with the standard NT1 Instruction Manual included in the kit. Note that there is a separate instruction manual for the building the aluminum shock absorbers.

New and Improved Parts

All of these parts are new or updated from the previous versions. Each of these parts feature their corresponding part number which can be used to re-order the parts. You can also refer to the complete exploded views.

Please note that this kit does not include a turnbuckle tool. We recommend that you purchase the #181030 HUDY Turnbuckle Tool 3mm.

NT1 2009 SPEC

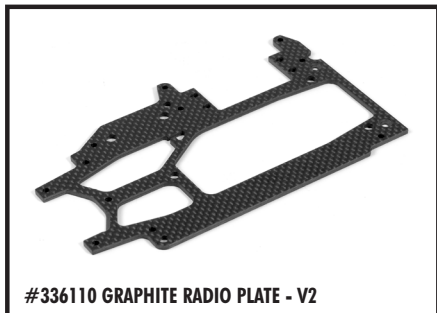

#336110 GRAPHITE RADIO PLATE - V2



#338601 FUEL TANK 75CC - SET - V2



#335581 SPRING C=7.8 FOR GEAR BOX
MEDIUM - SILVER



#335205 CVD DRIVE SHAFT FRONT
HUDY SPRING STEEL



#335305 CVD DRIVE SHAFT REAR
HUDY SPRING STEEL



#335554 COMPOSITE 2-SPEED GEAR 54T (2nd) - V2



#308305 XRAY ALU SHOCK ABSORBER-SET 4-STEP (2)




#335441 PUR REINFORCED DRIVE BELT SIDE
4.4 x 396 MM - V2



#332210 COMPOSITE STEERING BLOCK RIGHT - V2
#332220 COMPOSITE STEERING BLOCK LEFT - V2



#336120 COMPOSITE STEERING SERVO HOLDER - V2

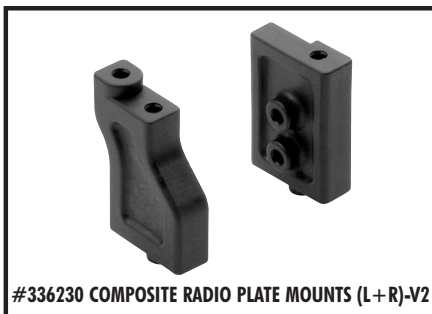

#336230 COMPOSITE RADIO PLATE MOUNTS (L+R)-V2



#332130 COMPOSITE SUSPENSION ARM
FRONT UPPER - V2



#333310 COMPOSITE UPRIGHT REAR - V2



#332110 COMPOSITE SUSPENSION ARM
FRONT LOWER - V2



#333110 COMPOSITE SUSPENSION ARM
REAR LOWER - V2