


XRAY 808

INSTRUCTION MANUAL SUPPLEMENTARY SHEET

Use this XB808 2011 Spec Supplementary Instruction Sheet along with the standard XB808 Instruction Manual included in the kit. This Supplementary Sheet highlights and explains new updated steps and you should refer to them while building your XB808 2011 Spec kit. Each step in this Supplementary Sheet indicates the section to which the updated step refers.


4. REAR SUSPENSION


PAGE 15 / STEP 2

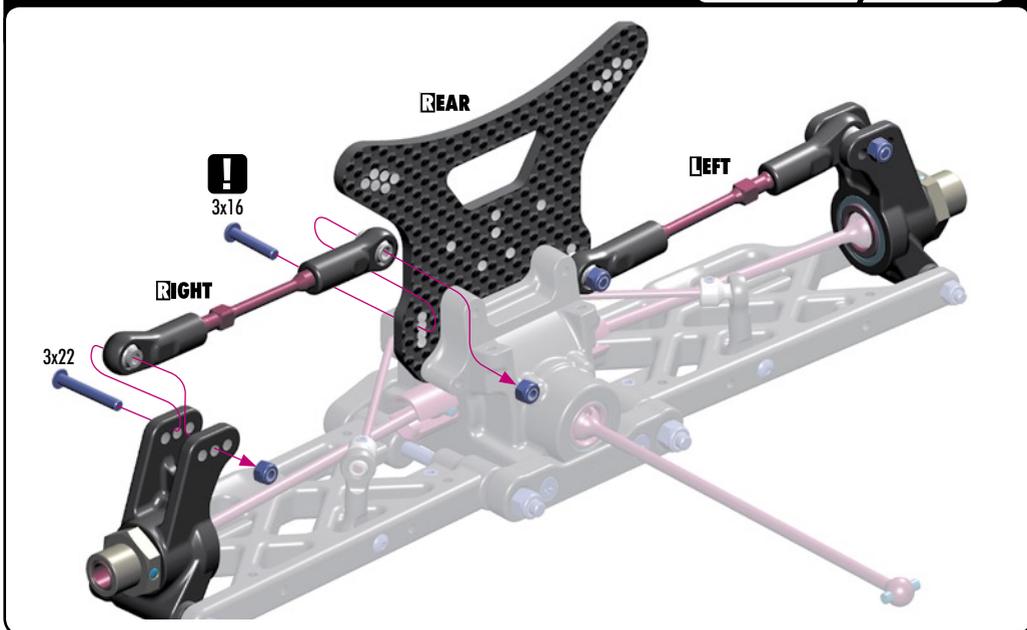

6. FRONT SUSPENSION



PAGE 19 / STEP 3

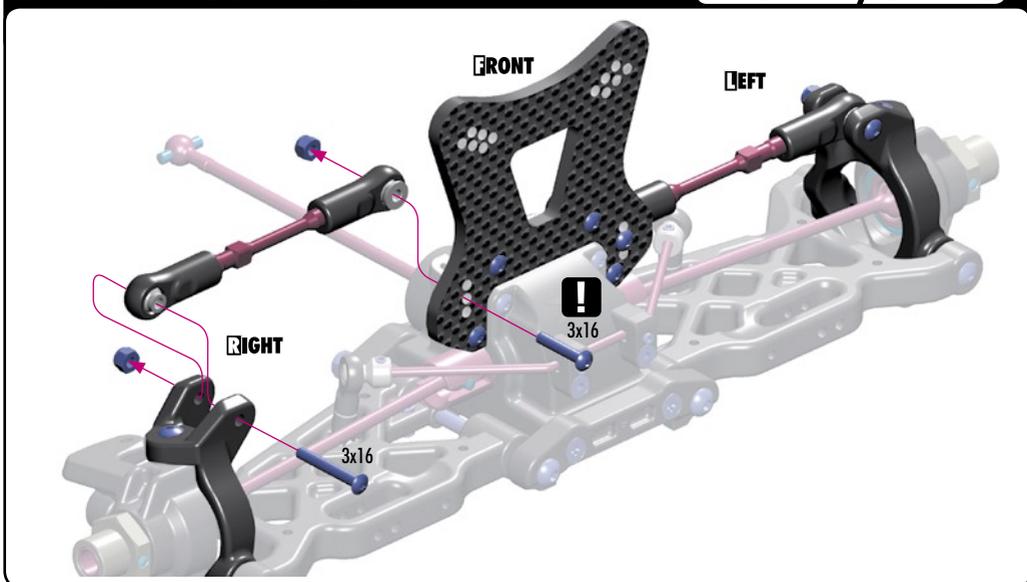

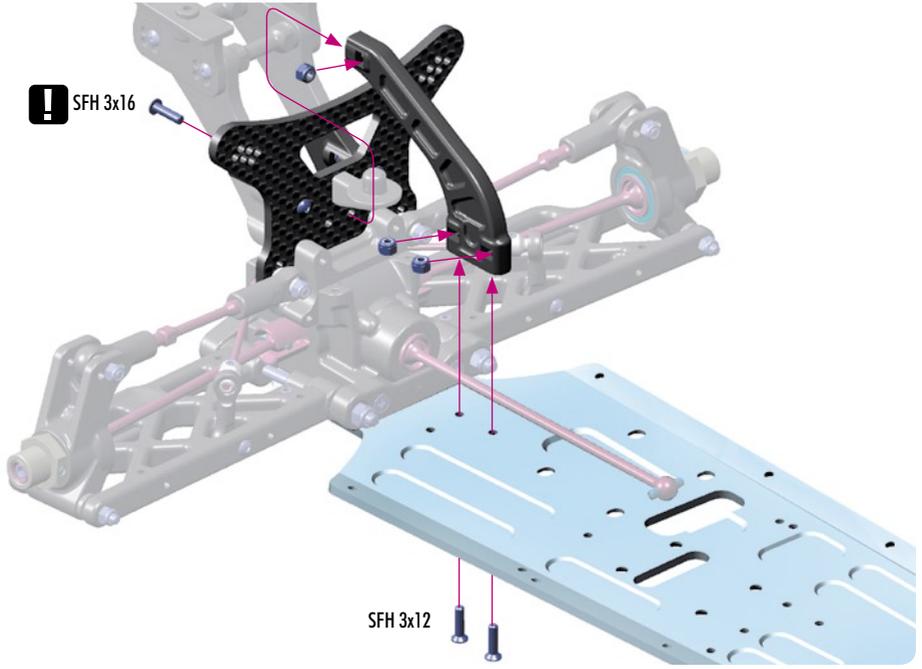


10. RADIO CASE

If the servo is touching the chassis side guard, use appropriate shims to ensure there is a small gap.

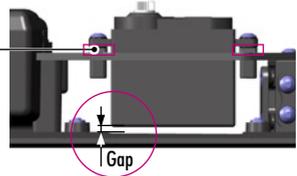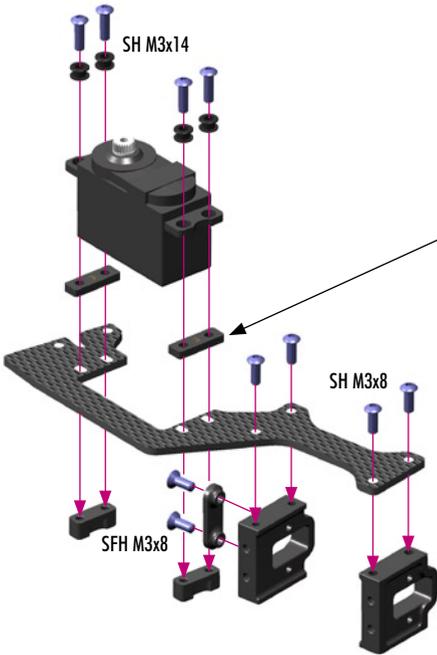

Use appropriate shims to ensure there is a gap between the servo and the chassis side guard.

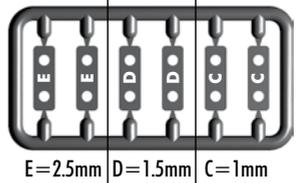

E=2.5mm | D=1.5mm | C=1mm