


XRAY XB4

TIP XB4 ANTI-ROLL BAR 2.0 MM

To fit the new optional #362480 Anti-Roll Bar 2.0mm a slight modifications has to be done. We suggest you to use a small round file and grind the slots on the diff bulkhead where the anti-roll bar sits to fit it properly. Next step is to redrill the hole for anti-roll bar in the #303431-K with the 2.0mm drill.

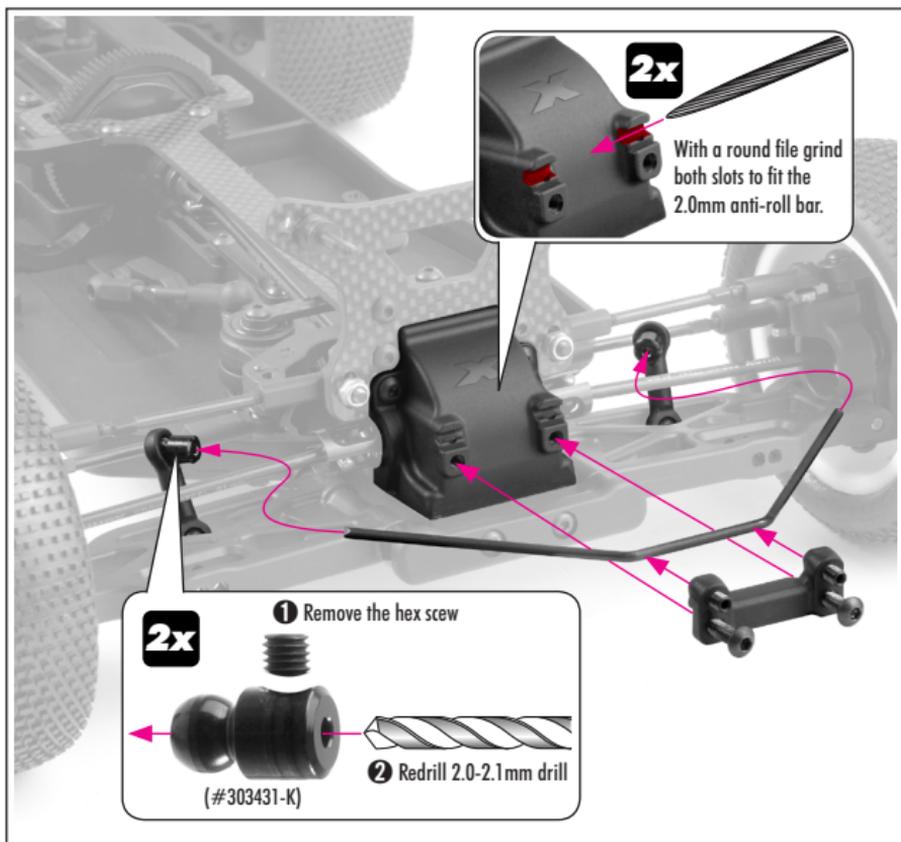

If you have any questions, please do not hesitate to contact XRAY at info@teamxray.com or visit our website at www.teamxray.com for news and updates.