


XRAY XB8

#358054 ALU SHOCK CAP NUT

The vent screw allows the shocks to simulate the work of an emulsion shock. In order to have the shocks working properly you will need to make a small cut in the rubber membrane so the oil flows through it, but still the membrane will seal the shock. Follow the instructions below.

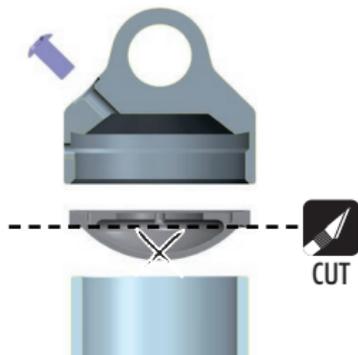

If you have any questions, please do not hesitate to contact XRAY at info@teamxray.com or visit our website at www.teamxray.com for news and updates.