


## #350906 XRAY XT8 ALU FRONT SUSPENSION CONVERSION SET - V2

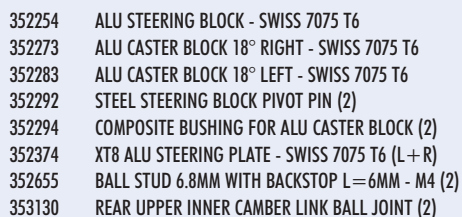


353381	ALU SHIM 4x7.5x2 (4)
353389	ALU SHIM 8x10x1.2 (2)
903308	HEX SCREW SFH M3x8 (10)
901404	HEX SCREW SB M4x4 (10)



355292  
P 3x17



901504  
SB M5x4

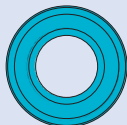

940816  
BB 8x16x5



353389  
SHIM 8x10x1.2

2x L=R

NOTE ORIENTATION



**TIP** Use HUDY Ball-Bearing Grease for servicing:


#106220 - Standard

#106221 - Extra

#106222 - Premium



NOTE ORIENTATION



8x10x1.2mm

2x L=R




Universal Drive Shaft (from kit)



903308  
SFH M3x8


2x L=R

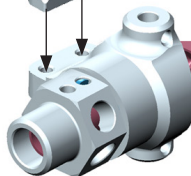


IO

353381  
SHIM 4x7.5x2

2x


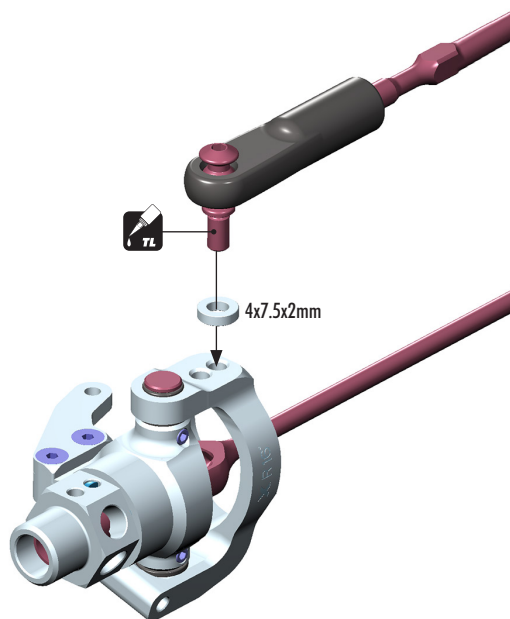


INITIAL SETTING

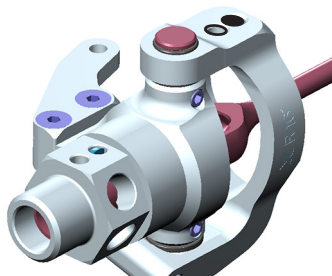



901404  
SB M4x4

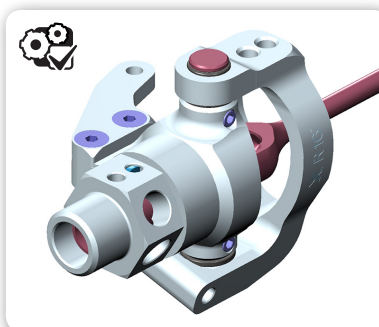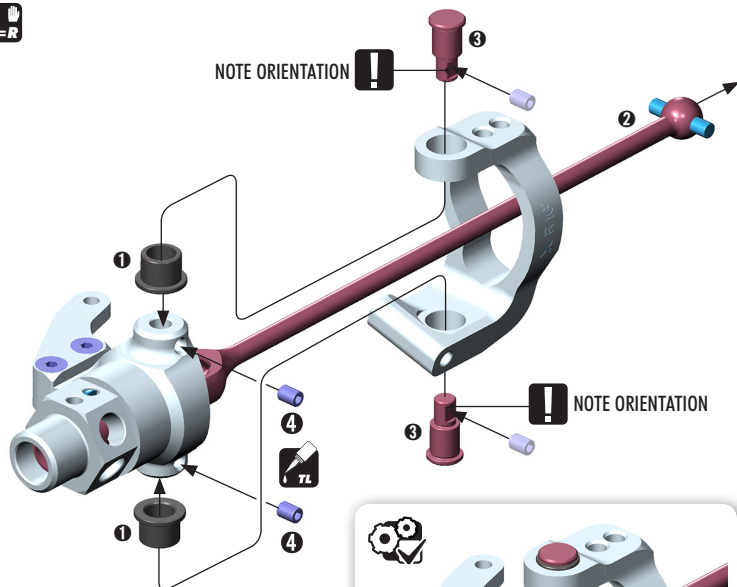

**TIP** Install the pivot balls with Professional Multi Tool (HUDY #183011)

