


XRAY

#375002 XRAY SOLID AXLE 1/10 PAN CAR-SET

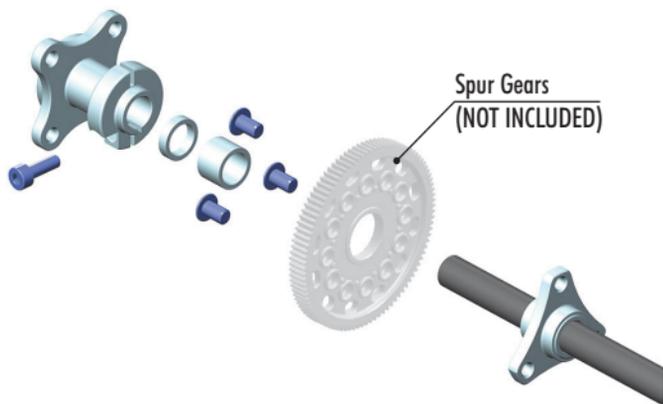

For the new X10'22, the shim thickness must be changed. Currently, for a ball diff, a 1mm shim is placed on one side and a 6mm shim on the other side. For a solid axle, you must take the 1mm shim off and use the shims you have in the bag for the solid axle. The 6mm shim stays on the other side. This will result in the same rear axle width from the center of the car.

The following spur gears fit the X10 Solid Axle:



SPUR GEARS - 64P

#375872	72T	OPTION
#375875	75T	OPTION
#375876	76T	OPTION
#375878	78T	OPTION
#375880	80T	OPTION
#375884	84T	OPTION
#375888	88T	OPTION
#375892	92T	OPTION
#375896	96T	OPTION

