



XRAY XB8

#358107 & #358207 XB8 Shock Absorbers Zero Rebound - Complete Set (2)


For instructions how to build the shock absorbers use the standard XB8 manual on page 38 which you can download also at www.teamxray.com/xb8/2019/en/download/
To set the zero rebound follow these instructions:

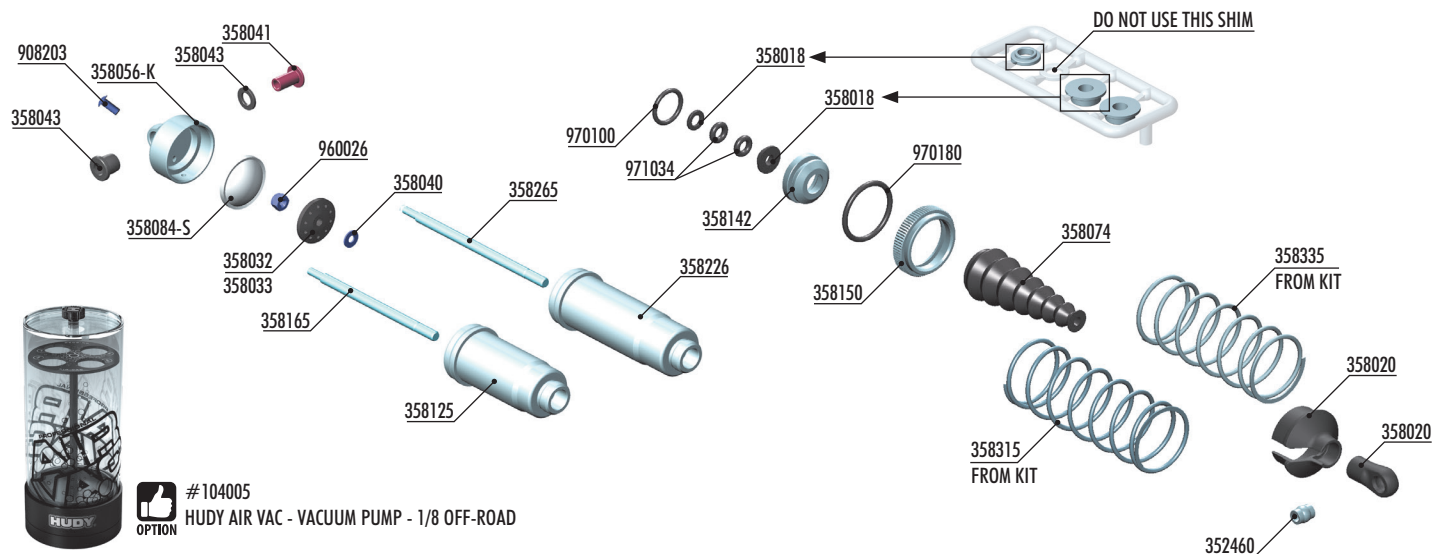

352460	PIVOT BALL 5.8 - V3 (10)	358056-K	XB8 ALU SHOCK CAP ZERO REBOUND - BLACK COATED (2)	358265	REAR SHOCK SHAFT 71.5mm (2)
358018	COMPOSITE SET OF SHIMS FOR SHOCKS (2)	358074	FOLDING SHOCK BOOT (4)	358315	XRAY FRONT SPRING 69MM - 3 DOTS (2)
358020	COMPOSITE SHOCK PARTS	358084-S	SHOCK RUBBER MEMBRANE BOTTOM RIBBED - SOFT (4)	358335	XRAY REAR SPRING 85MM - 3 DOTS
358032	SHOCK PISTON SET 8-HOLE (1.2; 1.3) 10-H. (1.1MM) - DELRIN - V2	358125	ALU FRONT SHOCK BODY - HARD COATED (2)	908203	HEX SCREW SOCKET HEAD CAP M2X3 (10)
358033	COMPOSITE SHOCK 6-HOLE PISTON SET (1.2; 1.3; 1.4MM) - DELRIN - V2	358142	ALU SHOCK BODY NUT FOR SHOCK BOOT (2)	960026	NUT M2.5 - SHORT (10)
358040	HARDENED SHOCK SHIMS (4)	358150	ALU SHOCK BODY ADJ. NUT (2)	970100	O-RING 10 x 1.5 (10)
358041	STEEL SHOCK BUSHING (2)	358165	FRONT SHOCK SHAFT 61mm (2)	970180	O-RING 18 x 1.8 (10)
358043	COMPOSITE SHOCK BUSHING & SHIM (2+2)	358226	ALU REAR SHOCK BODY - HARD COATED (2)	971034	SILICONE O-RING 3.4x2 (10)

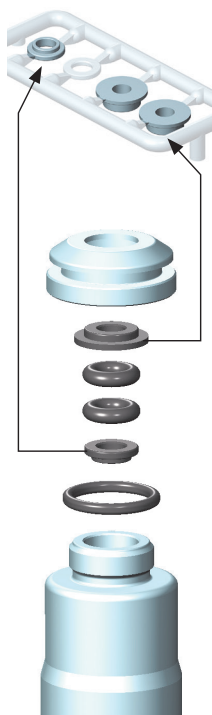


NOTE
ORIENTATION

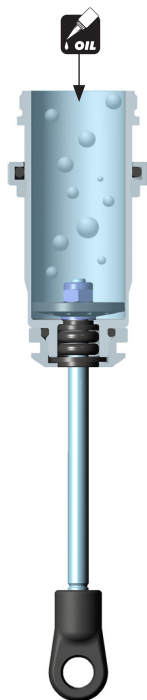

1


Extend the shock shaft completely.
Fill the shock body with the shock
oil.

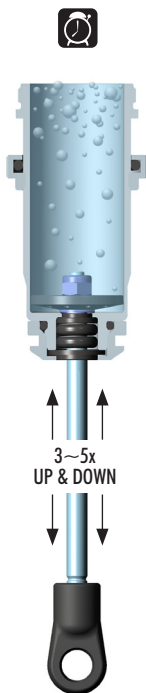

2

Move the shock shaft up and
down a few times to release the
air bubbles trapped beneath the
piston.

TIP: #104005 HUDY AIR VAC
VACUUM PUMP OFF-ROAD

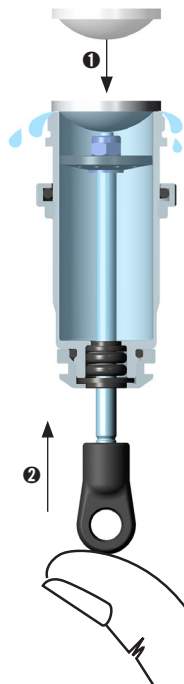


3

Drop the bladder into the top
of the shock, while holding
the bladder down with gentle
pressure push the shaft into the
shock body allowing the excess
oil to spill out.



4

When the shaft reaches the
bladder, screw the cap on
without the bleeder screw in
the cap.

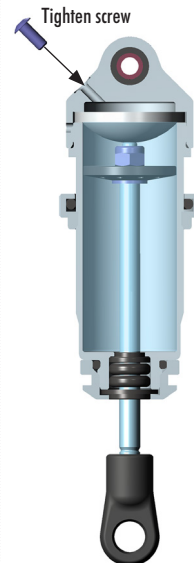

5

Now screw the bleeder screw
into the cap while the shaft is
still compressed.