

#382106 Suspension Arms 6° Caster (2)


When installing this set of 6° front upper arms on the M18, take note of the following additional instructions that must be followed.

IMPORTANT!


The 6° caster arms must be used **ONLY** at the front of the M18, not the rear.

1 Replace the standard front upper arms with the new 6° front upper arms.

2 Remove the shim between the front steering linkage and the left steering block.

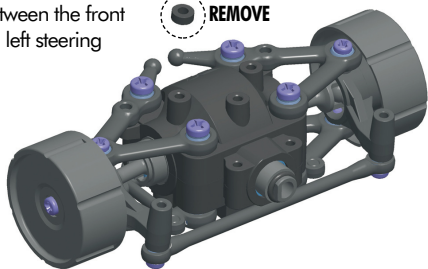

3 Re-assemble the lower front drag link using the indicated shims and screws.

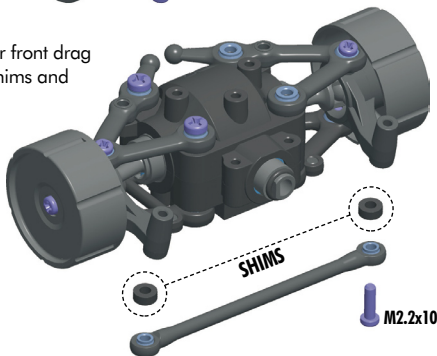

For further information & news please visit

www.teamxray.com

