




## #303401 T2 ANTI-ROLL BAR REAR (SET)

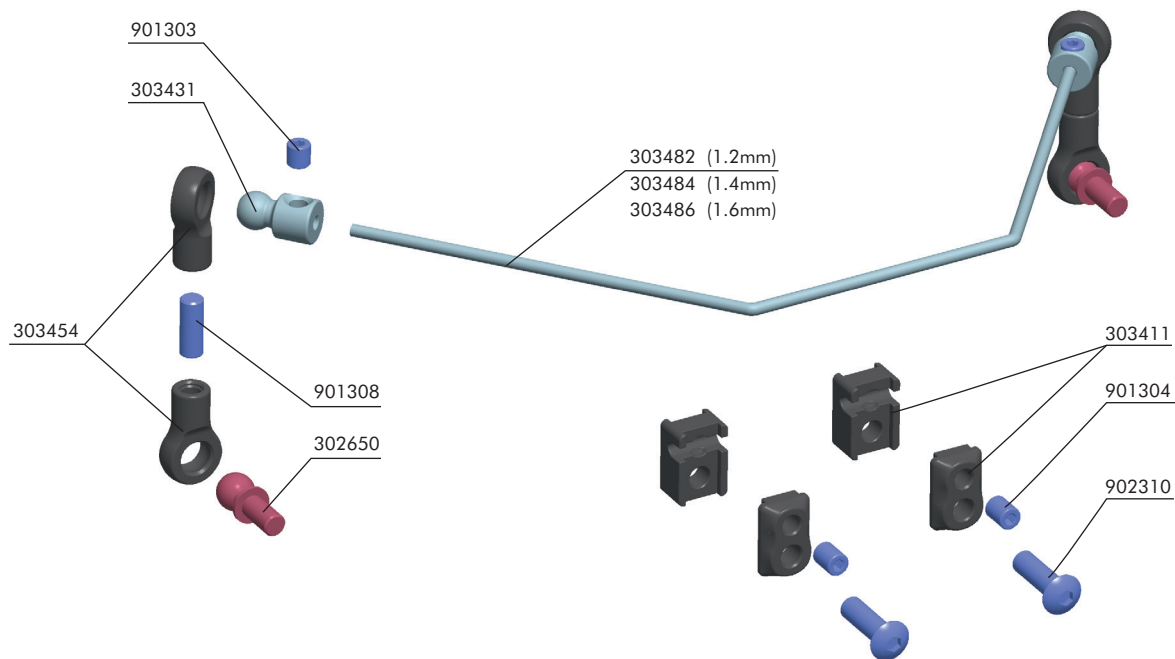

#302650 5 MM BALL END, WITH THREAD (6)  
 #303411 T2 COMPOSITE ANTI-ROLL BAR HOLDERS  
 #303431 T2 ALU 5 MM BALL END (2)  
 #303454 T2 BALL JOINT 5 MM - OPEN (4)

#303482 T2 ANTI-ROLL BAR REAR 1.2 MM  
 #303484 T2 ANTI-ROLL BAR REAR 1.4 MM  
 #303486 T2 ANTI-ROLL BAR REAR 1.6 MM  
 #901303 HEX SCREW SB M3x3 (10)


#901304 HEX SCREW SB M3x4 (10)  
 #901308 HEX SCREW SB M3x8 (10)  
 #902310 HEX SCREW SH M3x10 (10)



901308  
SB M3x8




1.

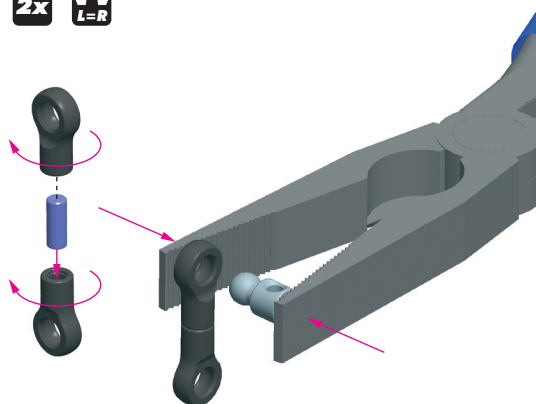

901303  
SB M3x3

2.

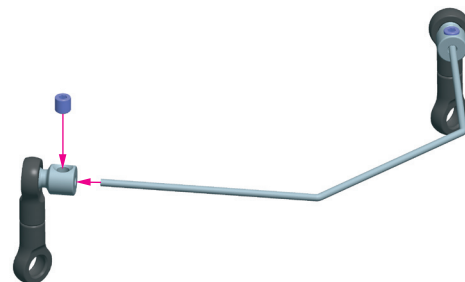


902310  
SH M3x10




901304  
SB M3x4

3.

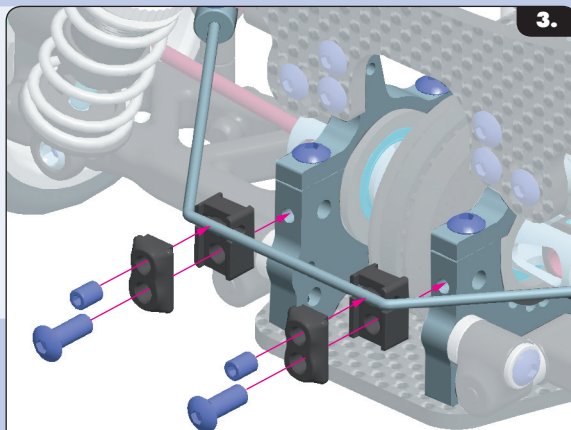

4.

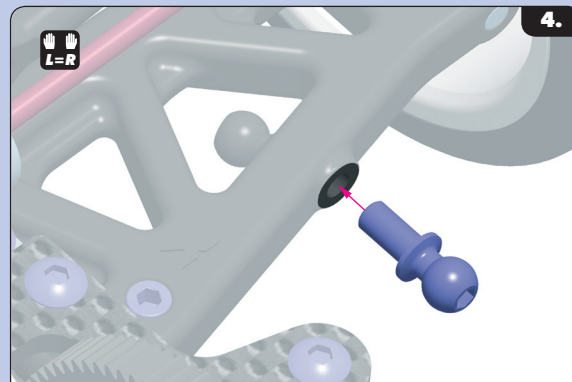

Install the ball joints to the installed pivot balls both in left and rear arm. After installation check the car for tweak.