


# #358012 COMPOSITE SET OF SHIMS FOR SHOCKS 0.7 & 1.3 MM

Please use these supplementary instructions in conjunction with the manual included in your kit.

Page: 28

Section: 11. Shock Absorbers

When building the shocks use these shims instead of the original shims in the kit.

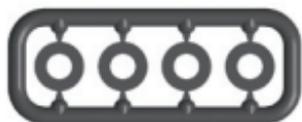

There are two different thickness shims, use them as shown. Use the same procedure when building both front and rear shocks.

