

TECH TIP

COMPOSITE DRIVE SHAFT CLIPS INSTALLATION

The T2'007 features improved drive shaft clips. Both the material and design have been improved to reduce wear of the differential outdrives. The improved design makes the installation the clips a bit more complicated.

We recommend following this easy and handy tip:


1

Insert the bottom of the clip into the bottom of the drive shaft pin.




2

Use pliers to press the other end of the clip onto the top of the drive shaft pin.

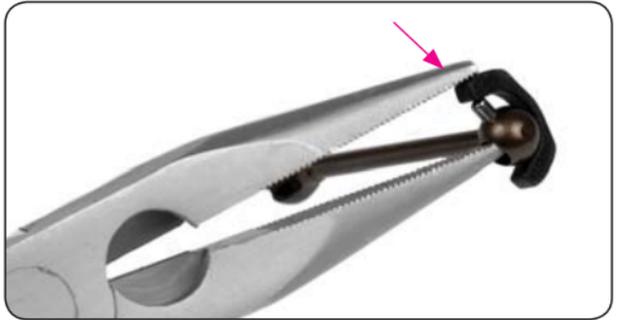

3

Use the pliers to compress the top and bottom of the installed clip. This will allow the clip to move more freely.

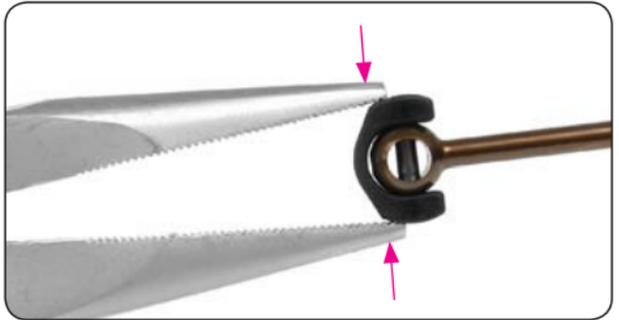

4

In case the clip does not move completely freely it will not have any significant negative impact on performance.



FREE BONUS: Included you can find a free bonus from XRAY - an additional free set of replacement drive shaft clips.