
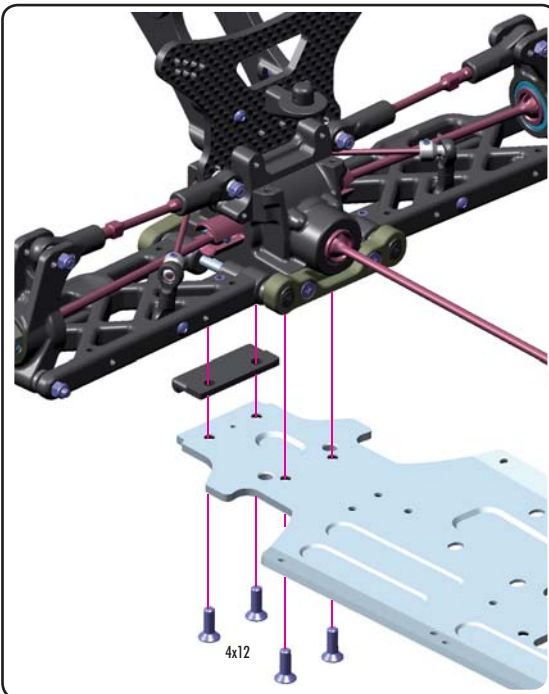


XRAY 808

#353303 XB808 ALU REAR LOWER SUSPENSION HOLDER SET - SWISS 7075 T6

The XRAY rear alu lower suspension holders provide a great range of adjustment for the rear suspension. The rear suspension holder assembly consists of three holders – two front holders (R 0-2, R 2-4) – and a set of eccentric bushings. Using different combinations of eccentric bushings (0, 0.5, and 1.0mm eccentric bushings are included), fine adjustment of both rear anti-squat and rear toe-in can be obtained. The tables below describe the amounts of rear anti-squat and rear toe-in change depending on the combinations of eccentric bushings used. For more information about the influence of rear anti-squat and toe-in on car handling, please refer to the HUDY Off-Road Set-up Book (#209099).

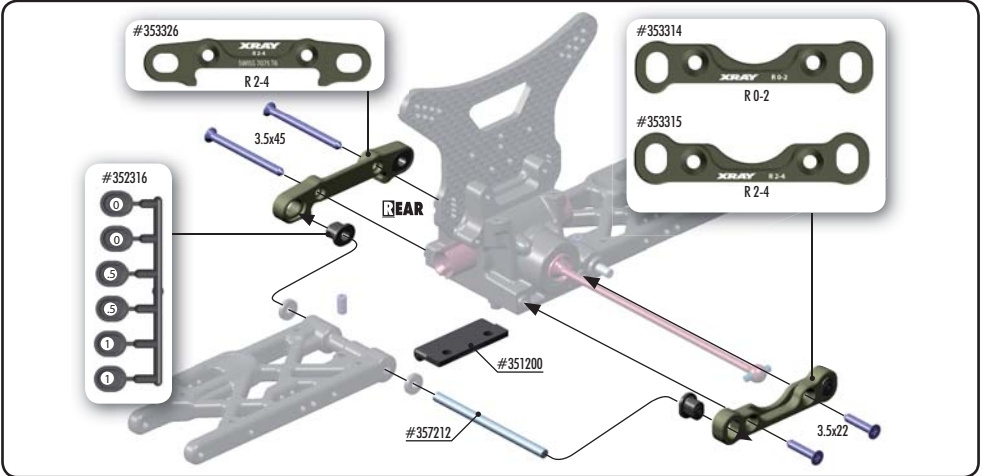

REAR TOE-IN ADJUSTMENT	
	2°
	2.5°
	3°
	3.5°
	4°

ANTI-SQUAT R 0-2	ANTI-SQUAT R 2-4
2° ★	4°
1°	3°
0°	2° ★

LEFT = RIGHT

LEFT = RIGHT

LEFT = RIGHT

LEFT = RIGHT

LEFT = RIGHT

LEFT = RIGHT

LEFT = RIGHT

LEFT = RIGHT

LEFT = RIGHT

LEFT = RIGHT

LEFT = RIGHT

LEFT = RIGHT

LEFT = RIGHT

LEFT = RIGHT

LEFT = RIGHT

LEFT = RIGHT

★ XB808 basic setting