


# XRAY 808

#353093 XB808 ALU REAR SHOCK TOWER SWISS 7075 T6 (3MM) - HARD COATED

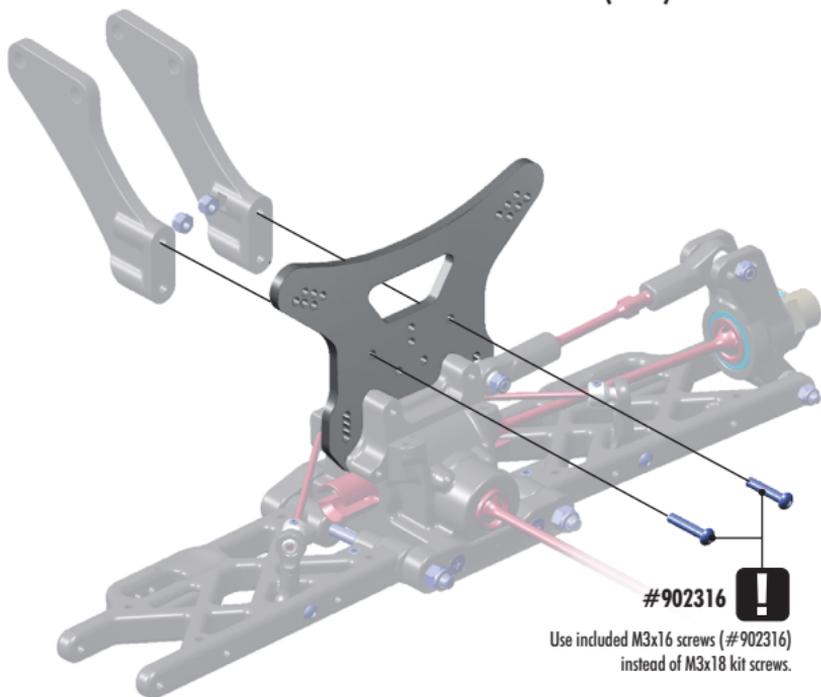

#902316



Use included M3x16 screws (#902316)  
instead of M3x18 kit screws.

If you have any questions, please do not hesitate to contact XRAY at [info@teamxray.com](mailto:info@teamxray.com) or visit our website at [www.teamxray.com](http://www.teamxray.com) for news and updates.