


1. Press out the battery mount straps from the standard battery holders you use on your car.



2. Press the shorter battery holder mount's ball end into the plastic hub; it will snap into place. Once installed, the ball end should pivot freely in all directions.

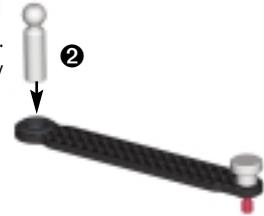

309346
SFH M3x12

3. Insert the screw #30 9346 into the holes on the chassis.

4. Thread short stands onto the screws.

5. Place the graphite brackets onto the screws as shown.

6. Mount the separate shorter threaded battery holder onto the screws. Orient the mounts so the battery will fit in the cutouts.

7. Mount the ball-end battery holder mounts (with battery straps) onto the screws. Orient the mounts so the battery will fit in the cutouts.

