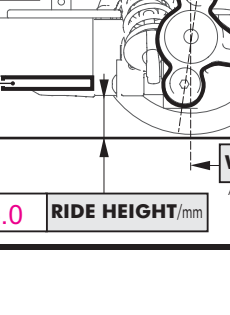
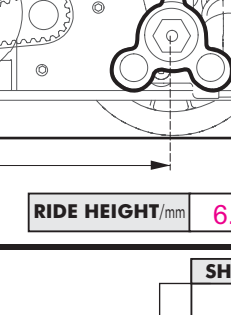
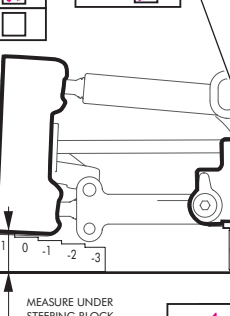
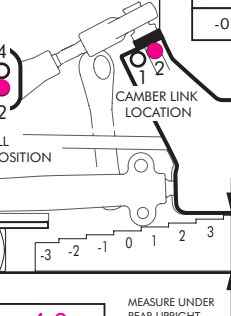
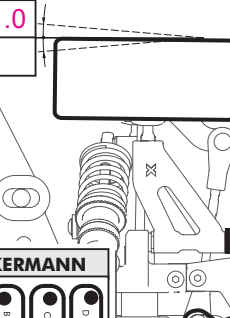
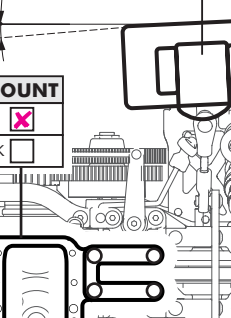
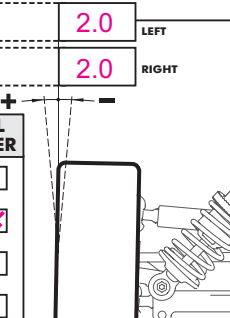
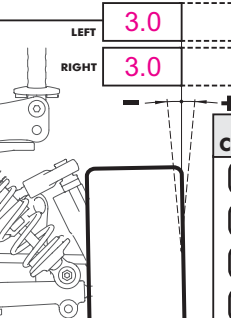


XRAY NT1

FRONT		REAR	
BUMPER NARROW <input checked="" type="checkbox"/> WIDE <input type="checkbox"/>		CASTER 9.5° <small>AUTOMATICALLY CALCULATED</small>	
			
WHEELBASE/mm 261 <small>AUTOMATICALLY CALCULATED</small>		RIDE HEIGHT/mm 6.5	
RIDE HEIGHT/mm 6.0			
UPPER SHOCK POSITION			
OFFSET/mm +0.75 <input type="checkbox"/> 0 <input checked="" type="checkbox"/> -0.75 <input type="checkbox"/>		SHIM /mm 3	
UPSTOP YES <input type="checkbox"/> NO <input checked="" type="checkbox"/>		OFFSET/mm +0.75 <input type="checkbox"/> 0 <input checked="" type="checkbox"/> -0.75 <input type="checkbox"/>	
			
MEASURE UNDER STEERING BLOCK 1.0		MEASURE UNDER REAR UPRIGHT 4.0	
DOWNSTOP /mm 4.0			
TOE/degr. TOE IN 2.5			
OUT 1.0 IN		ENGINE MOUNT STANDARD <input checked="" type="checkbox"/> MONOBLOCK <input type="checkbox"/>	
ACKERMANN D A C B B C A D <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/>		UPPER ARM POSITION <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> 0 0.5 1.0 1.5 <small>SHIMS BEHIND ARM</small>	
			
CAMBER /degr. LEFT 2.0 RIGHT 2.0		CAMBER /degr. LEFT 3.0 RIGHT 3.0	
ROLL CENTER <input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> LEFT = RIGHT		ROLL CENTER <input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> LEFT = RIGHT	
			
TRACK WIDTH/mm 198		TRACK WIDTH/mm 200	
COMMENTS			