



XRAY M18T

TECH TIP: MODIFICATION OF SERVO HOLDERS

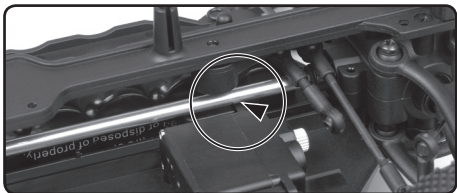

Some servos may get into contact with the central aluminum layshaft and this can brake the free action of the transmission. It is suggested to slightly modify the holder of the servo.

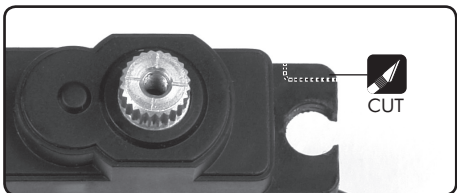

Use a sharp hobby knife and remove the edge of the servo holder as shown.



View on the finished modification

Safety Precautions:

- Practice using the hobby knife before making this modification.
- Wear safety glasses and gloves.
- Perform this modification in a safe area away from small children.

If you have any questions please contact us at info@teamxray.com or visit our website at www.teamxray.com for news and updates.