




1.1MM CLUTCH SPRINGS SUPPLEMENTARY SHEET

These 1.1mm clutch shoe springs use slightly thicker wire which will not fit properly in the groove of the original XRAY clutch shoes.

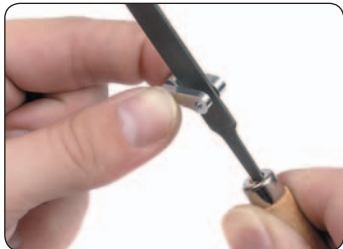

To ensure the proper fit of these spring in the clutch shoes, you will need to slightly hand-modify the groove in each shoe. Use a thin file to enlarge the width of the groove. **DO NOT** use a knife. Make sure to use proper eye and hand protection.



After the modification the spring should easily fit into the clutch shoe.

The latest clutch shoes labeled as #358561 Alu Clutch Shoes - Light 1.71g for 1.1mm springs (3) - already have had this modification performed at the factory.

If you have any questions, please do not hesitate to contact XRAY at **info@teamxray.com** or visit our website at **www.teamxray.com** for news and updates.